


Energizer®

BATTERY REPLACEMENT GUIDE

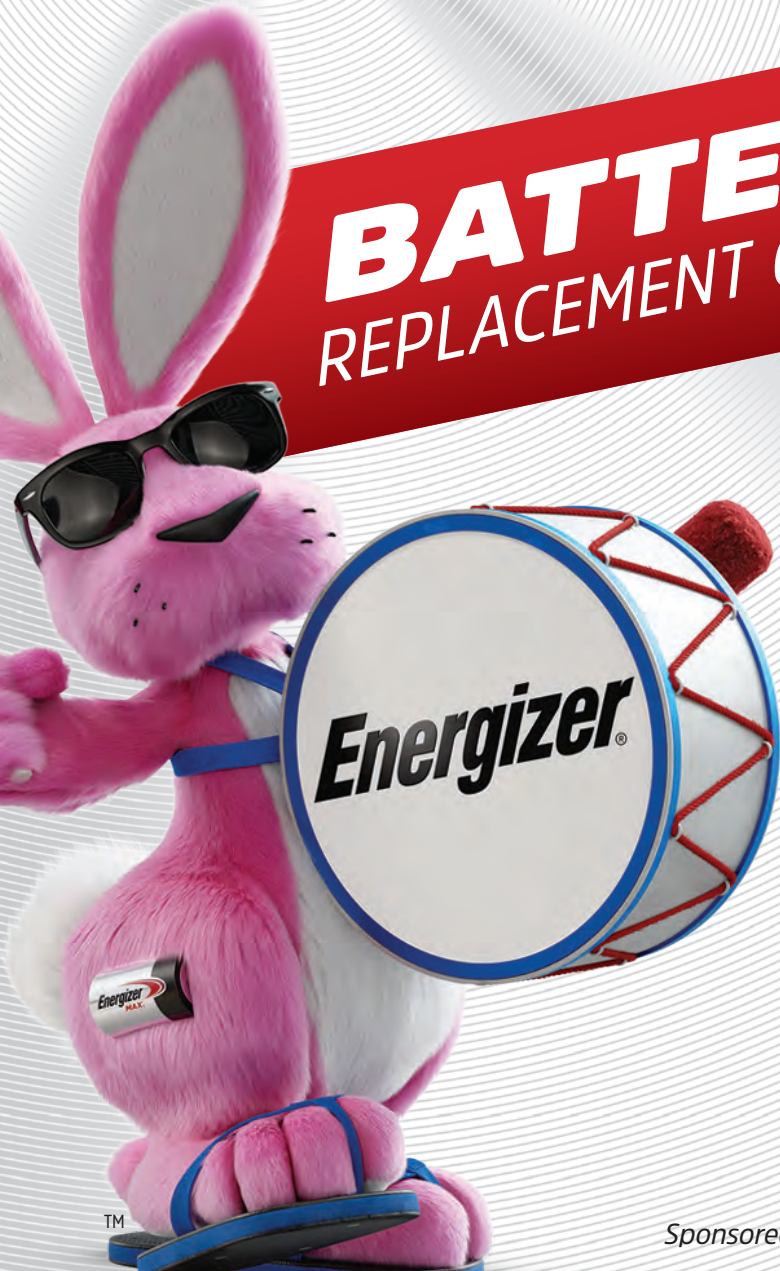

TM

Sponsored by **Energizer.**

BATTERY CROSS REFERENCE GUIDE

CELL SIZE **REPLACES BATTERIES LABELED AS** **DEVICES COMMONLY USING THESE TYPES**

123	RL123A, CR123A, CR123A, K123LA	Photo, laser sights, security cameras, connected home devices, flashlights
223	RL223A, CRP2P, K223LA	Photo, key fobs, calculators, connected home devices
315	RW3162, SP315, V315, SR716SW, 40, Type HA	Watches
317	SP317, V317, SR516SW, Type CA	Watches
319	SP319, V319, SR527SW	Watches
321	D321, 321, RW3212, SP321, V321, SR616SW, Type DA, 38	Watches
329	V329, 24	Watches
337	SR416SW	Watches
341	V341, 39, 33	Watches
344/350	344, V344, V350, 242, 12, WS12, 604.14	Flashlights
357/303	R3357/7, 303/357, SR44W, V357, V303, GS13, Type J, SR44W, SG13, 228, GS14, 9, SBA9, SR44SW, WS14, Type A	Toys, games, books, medical devices, electronics, sporting goods, pet collars
362/361	362, 361, RW410, SP362, SP361, V362, V361, Type S, SB-DK, SR721SW, 19, 601, SB-AK, Type X, SR721W, 46, SG11	Watches
364/363	364, SP364, V364, GP64, WIV, SR621SW, 31, SB-AG, SG1, Type T	Watches
371/370	371, 370, SP371/SP370, V371/V370, 605, SB-AN, SR920SW, 30, SR920W, 36, Type Z, SG6	Watches
373	SP373, V373, SR916SW, 41, Type LA, Type HA, 617, SB-AJ	Watches
377/376	377, SP377, V377, 37, SR626SW, G4, Type BA, 606, SG4	Watches, digital thermometers, calculators, key fobs
379	SP379, V379, SR521SW, Type JA	Watches
386	386/301, 386, 301, RW442, SP386, SP301, V386, V301, SG12, GP86, WG12, SR43W, 260, Type H, 6, GS12, 226, GP96, 120TC, Type D, 186, LR43, GP86A, AG12	Watches, medical devices, sporting goods
387S	V387, 214, HS-B, W2	Watches
390/389	390, 389, SP389, V390/V389, SR1130SW, 11, SB-AU, SG10, GP89, SR1130W, 603, Type M, G10, 189, LR54, GP89A, 4274, 89A, AG10	Watches, toys
391	391/381, SP391, V391, SG8, 317, L, WL5, G8, GP91, SR1120W, 23, W1K	Watches
392/384	392, 384, SR-41EL, V392/V384, SG3, GP92, WL-1, G3, SR41W, 247, WF3, K, 2, GS3, 247, SR41SW, 10, SB-D1, SB-AL	Watches, medical devices, laser pointers
393	309/393, SP393, V393, SG5, 15, WL6, SR754W, F, G5, GP48	Watches
394/380	394, V394, GP94, 27, SG9, G9, SR936SW, SB-A4	Watches
395/399	395, 399, SP395 SP399, V395/V399, GP95, Type LA, SR927SW, SR927W, SG7, G7, Type W, SB-BP, SB-EP	Watches
397/396	396/397, 397, 396, SP397/SP396, V397/V396, GP97 Type N, W2U, 26, SR726SW, SB-AL, SB-DL, GP96, Type V, SG2, SR726W, 29, W2M	Watches, sporting goods
539	J, KJ	Photo, medical devices
1025	CR1025	Watches, medical devices, key fobs, electronics
1216	CR1216	Watches, medical devices, key fobs, electronics

SPECIALTY (WATCH / ELECTRONIC / PHOTO)

BATTERY CROSS REFERENCE GUIDE

CELL SIZE **REPLACES BATTERIES LABELED AS** **DEVICES COMMONLY USING THESE TYPES**

SPECIALTY (WATCH / ELECTRONIC / PHOTO)

1220	CR1220	Watches, key fobs, calculators
1616	CR1616, KECR1616	Watches, medical devices, garage door openers
1620	CR1620, KECR1620	Watches, medical devices, key fobs, electronics
1632	CR1632, KECR1632	Watches, medical devices, calculators, games
2012	CR2012	Medical devices, key fobs, remotes, toys, games
2016	CR2016, KECR2016, LF14V	Watches, medical devices, key fobs, electronics, sporting goods
2025	CR2025, KECR2025	Watches, medical devices, key fobs, electronics
2032	CR2032, KECR2032	Watches, medical devices, key fobs, electronics, sporting goods
2430	CR2430, LF12W	Watches, medical devices, key fobs, electronics
2450	CR2450, KECR2450	Medical devices, key fobs, scales
1CR2	CR2, RLCR2, KCR2	Photo, connected home devices
2CR5	245, RL2CR5, 2CR5M, KL2CR5	Photo, key fobs, calculators, medical devices
2L76	1/3N, CR1/3N	Photo, key fobs, calculators, dog collars
A23	MN21/23, KE23A, 4223	Garage door openers, car alarms, lighters, key fobs, electronics
A27	4227	Watches, calculators, garage door openers, key fobs, wireless doorbells, toys
A76	LR44, V13GA, 4276, KA76, Type KA	Watches, toys, calculators, medical devices
A544	28A, 4LR44H, K28A, 44C13, 544	Medical devices, key fobs, calculators, dog collars
AAAA	E96, KE825, 4061	Flashlights, Bluetooth headsets, laser pointers, PDAs, voice recorders
CRV3	RLCRV3, CR-V3	Photo
EPX76	MS76H, RS76, G-13, V76PX, 4075, KS76	Photo, calculators
N	E90, 810, AM5, 4001, KN, LR1N	Photo, laser sights, night vision goggles, flashlights, mantle clocks, ceiling fan remotes

HEARING AID

10	AC10, PR-230(10)(536), p10/24610, PR10, 10A	Hearing Aids
13	AC13, PR-13(48), p13/24606, 13HPX, PR13	Hearing Aids
312	AC312, PR-312(41), p312/24607, 312A, 312HPX, PR312	Hearing Aids
675	AC675, PR-675(44), p675/24600, 675HPX, PR675, 675A	Hearing Aids

HOUSEHOLD

AA	E91, A91, L91, MN1500, 815, LR6XE/LR6PA, 4706, 4906, 4106, 2006, KAA, LR6N, 7524, B15A, 6106	Various
AAA	E92, A92, L92, MN2400, 824, LR03XE/LR03PA, 4703, 4903, 4103, 2003, K3A, LR03N, 7526, B24A, 6103	Various
C	E93, A93, MN1400, 814, LR14XP/LR14PA, 4714, 4914, 4114, 2014, KC, LR14N, 7522, B14A	Various
D	E95, A95, MN1300, 813, LR20XP/LR20PA, 4720, 4920, 4120, 2020, KD, LR20N, 7520, B13A	Various
9V	522, A522, L522, MN1604, A1604, 6LF22XP/LR22PA, 4722, 4922, 4122, 2022, K9V, 6LF22, 7590, B1604A, R9VL, 6122	Various



Do read the instructions on your device before installing batteries. Make sure to insert the batteries properly, following the symbols showing you the correct way to position the positive (+) and negative (-) ends of the batteries.

Do keep battery contact surfaces clean by gently rubbing with a clean pencil eraser or cloth.

Do replace batteries with the size and type specified by the device's manufacturer. Remove all used batteries from the device at the same time, then replace them with new batteries of the same size and type.

Do store batteries in a cool, dry place at normal room temperature. Remove batteries from devices that will be stored for extended periods.

Don't dispose of batteries in a fire – they may rupture or leak. Don't carry loose batteries in a pocket or purse with metal objects like coins, paper clips, etc. This will short-circuit the battery, generating high heat.

Don't recharge a battery unless it is specifically marked "rechargeable." Attempting to recharge a normal battery could result in rupture or leakage. Don't use rechargeable alkaline batteries in nickel metal hydride battery chargers.

Don't put batteries or battery-powered devices in hot places – elevated temperatures increase the self-discharge of batteries.

Don't mix old and new batteries, or mix different types or makes of batteries. This can cause rupture or leakage, resulting in personal injury or property damage.

Don't give batteries to young children.

Look inside for details on selecting the right replacement battery for your devices!